Bathroom / Portable Flip Heater

Model: EWS-800H-W

User Manual

Portable

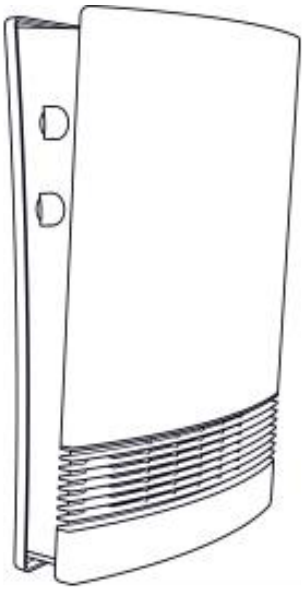

Bathroom Wall Mounted

Please read user manual before use

Product Illustration:

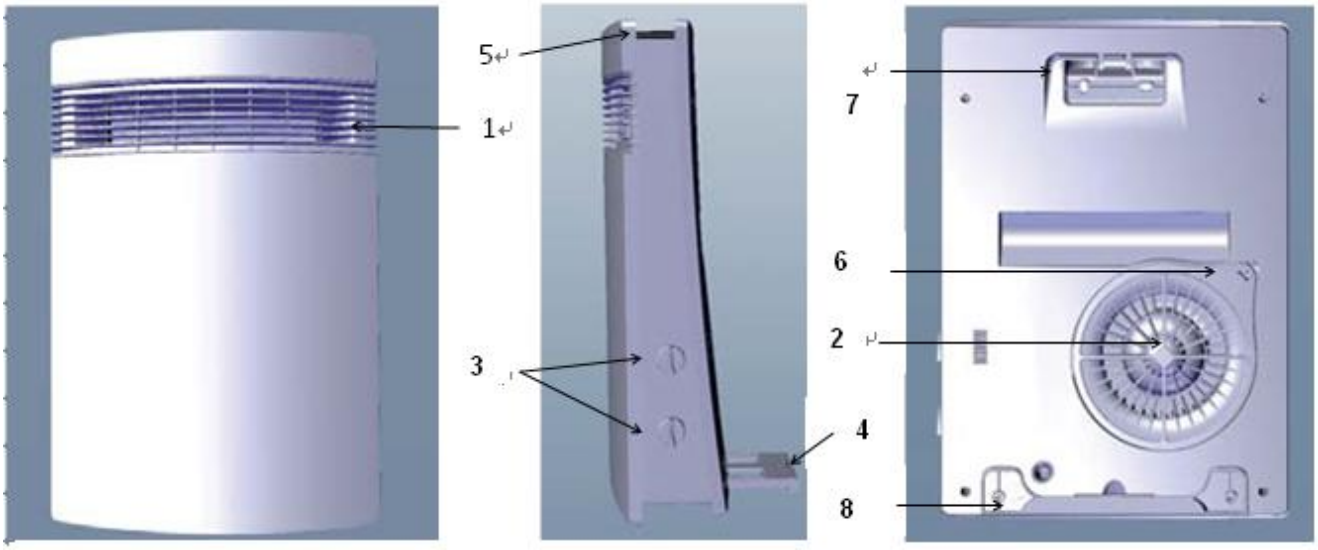

1. Air outlet
2. Air inlet
3. Thermostat and Switch
4. Foot
5. Alarm light
6. Filter
7. Lower bracket
8. Upper bracket

Photo Indication:

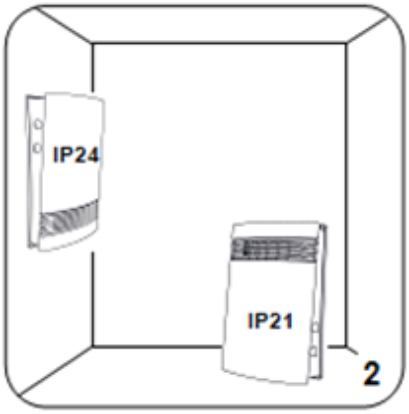

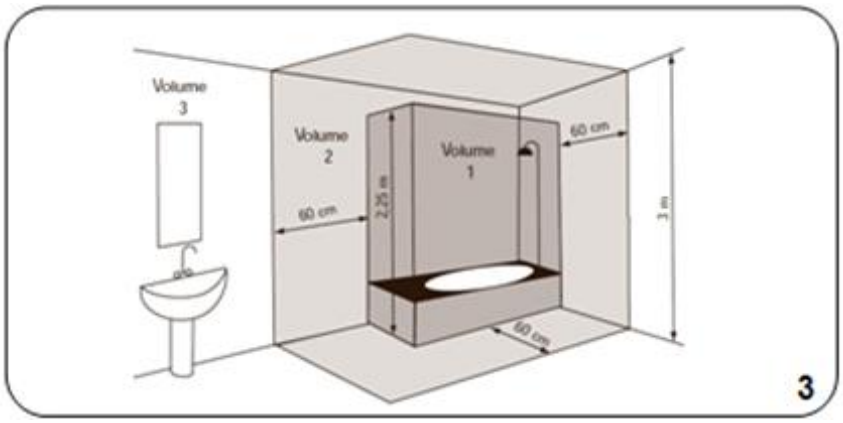

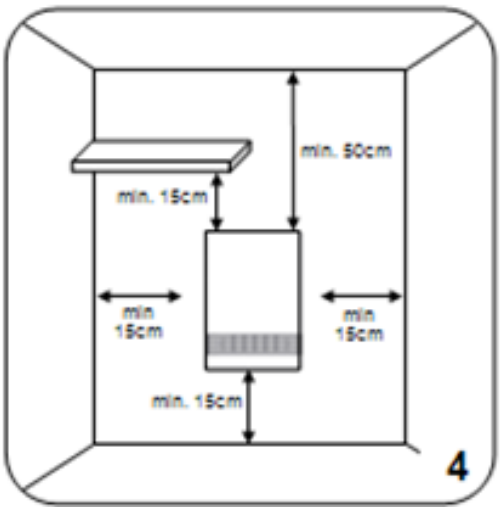

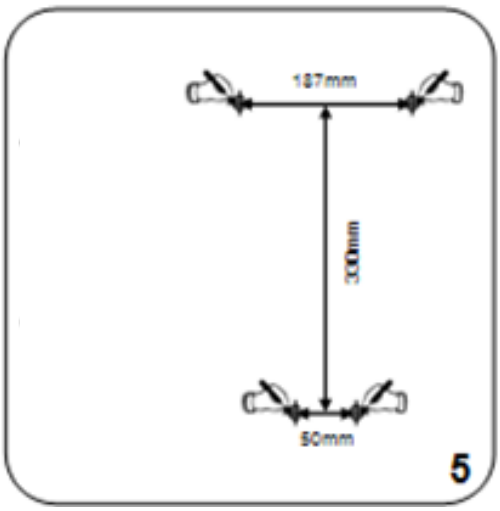

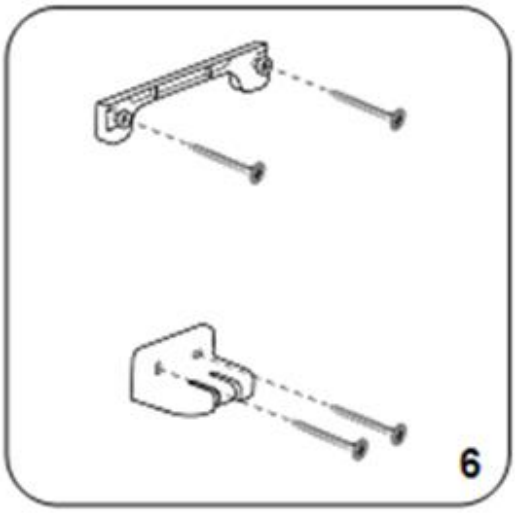
6

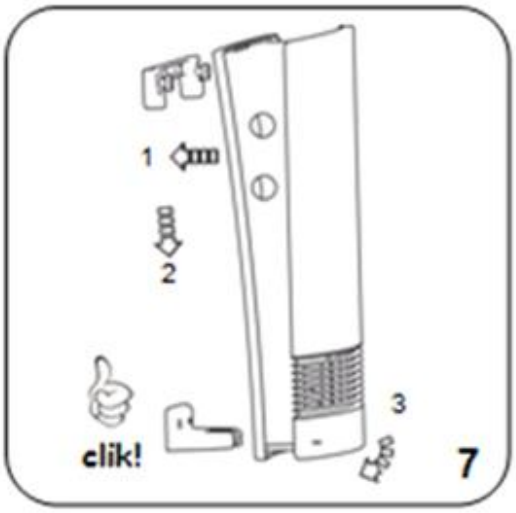
1
2
3
clik!
7

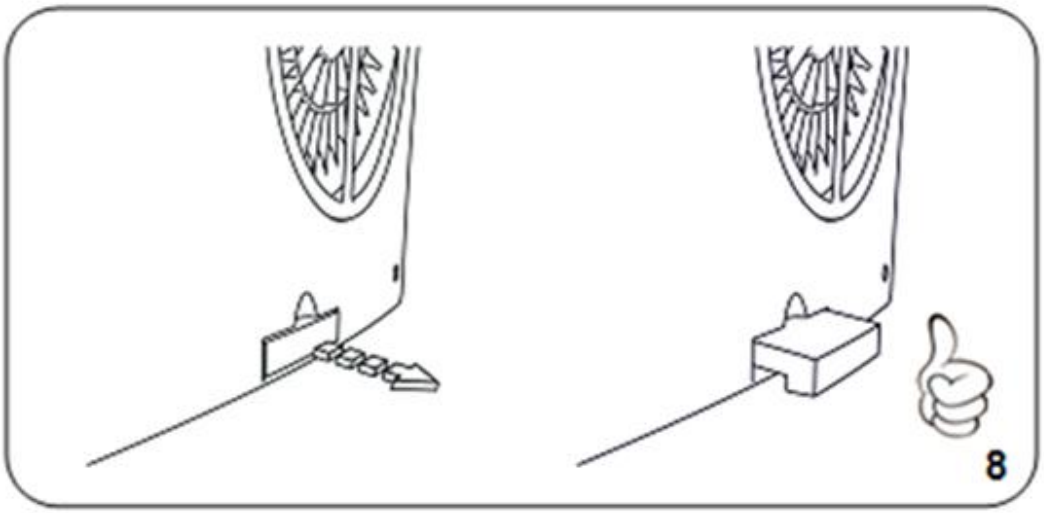
8

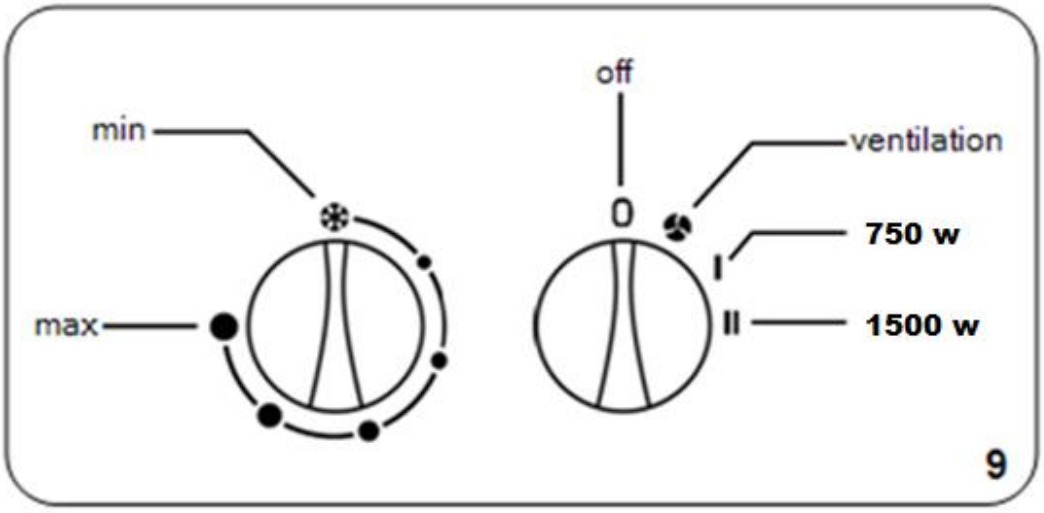
min
max
off
0
ventilation
I
750 w
II
1500 w
9

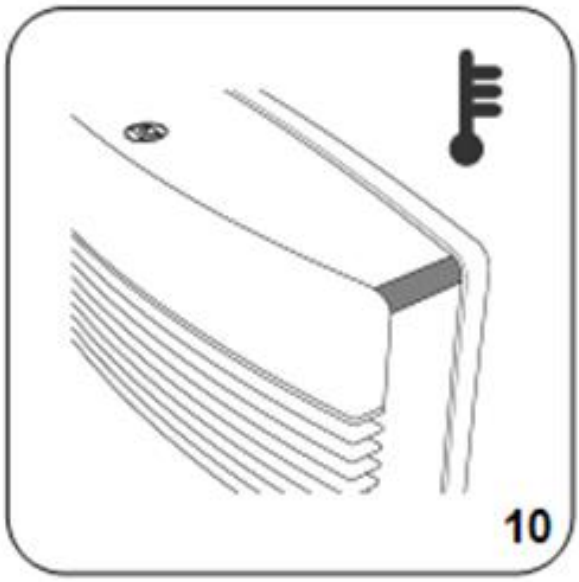

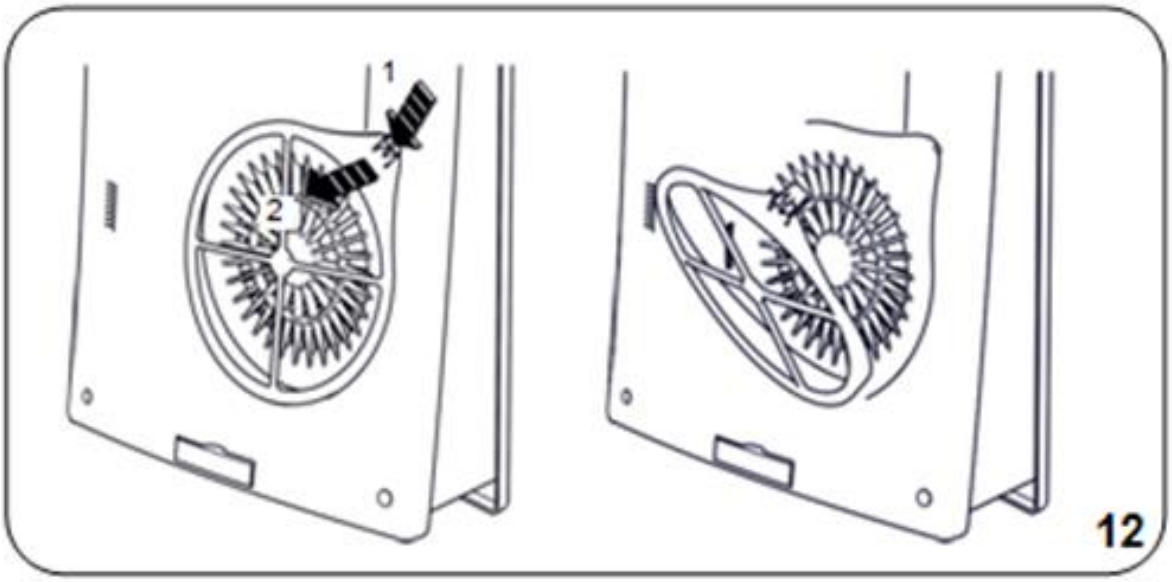

WARNING

1. Make sure to plug the Flip Heater into a standard 120V, 60HZ outlet.
2. If the plug, wire or the Product itself is damaged, do not use the Product. It must be repaired through our warranty center. You can reach the warranty center at (877) 891-7333
3. Electrical products are not to be used by persons (including children) with physical, sensory or mental impairments, or with lack of experience and knowledge, unless they are supervised or instructed by persons in charge of safety. Adults should instruct children not to play with electrical appliances.
4. This heater should not be operated without monitoring.
5. Do not allow children to use this heater or treat it as a toy.
6. This heater must be kept out of the reach of children.
7. This heater is for indoor use only. Do not use it outdoor.

8. Do not use this heater in closed environment.
9. To avoid overheating, do not cover the appliance. Do not leave any object or cover on the appliance while it is on and after off.
10. This heater cannot used to dry clothes.
11. Do not splash any liquid into the heater.
12. Always place the heater on a flat and even surface.
13. When the heater is lying on a side, turn it off immediately.
14. The Flip Heater must be positioned vertically in relation to the floor.
15. Never use this device near curtains, inflammable material, furniture, etc.
16. Do not use flip heater in rooms with explosive gas or inflammable solvents / varnishes / glues.
17. Do not place the appliance near inflammable substances (at least 90cm away from the heater). To prevent potential risks of fire, never use the appliance on soft surfaces such as beds, where openings can be obstructed.
18. When the appliance is not used and before any maintenance operations, disconnect the plug from the mains socket.
19. In order to install correctly the heater, refer carefully WALL MOUNTING and MOBILE USE paragraphs.
20. The power cord must never be in contact with the hot surfaces of the Flip Heater.
21. Do not place the appliance directly below a power socket.
22. Do not lay the power cord under a carpet. Do not cover the power cord with a cover or similar elements. Pay attention not to place the power cable where it is likely to get into people's way.
23. Never insert external objects in the ventilation and air intakes; as this could cause risk of fire, electric shock or damage to the appliance.
24. Never use the appliance with a programmer, timer or any other similar device that switches on the heating appliance automatically, since there is a risk of fire if the appliance is covered or incorrectly positioned.
25. Do not pull or damage the power cord.
26. If the product does not work properly, immediately turn it off and disconnect it from the mains socket.
27. The Flip Heater has a double IP protection: it has IPX1 when it is used as mobile and it has IPX4 in wall mounted position. (Pic2)
28. The product must be at least 40 inches far from inflammable objects. No objects should be placed nearer than 24 inches from the outlet vent.
29. Make sure you completely know how to operate this Product and understand all the warnings, safety matters and other details before use.
30. All pictures are for reference only.

Wall Mount Installation:

Notice:

1. In wall mounted position the Flip Heater has the higher protection level of IP24. It can be used in bathrooms and damp places, but IT CANNOT BE INSTALLED WITHIN THE PERIMETER OF THE BATHTUB OR SHOWER (VOLUME 1), or closer than 24 inches to the bathtub (VOLUME 2) as showed in picture 3. Please notice that the Product cannot be installed within gray area. If your bathroom cannot meet this installation requirement, please do not install inside the bathroom to avoid accident.
2. Allow at least 24 inches from the Product to ceiling at the wall mounted position, 7 inces above the floor,

and 7 inches away from sides. If your bathroom cannot meet this installation requirement, please do not install inside the bathroom in order to maintain safety standards.

3. The switches and thermostat cannot be touched by person in the bath or shower.
4. When you choose the location on a wall to install the Product first ensure there are not hidden pipes and electric wires. If you are not sure about the wall's structure or do not understand how to install the Product, please find a professional technician to install for you.
5. If you do not use the Flip Heater for a long time, uninstall the Flip Heater and keep it in a dry place. Do not keep the Flip Heater inside bath room if you do not use it for long period.

Wall Mounting Installation:

1. Paste the 1:1 Hanging template on the selected position. Make sure to level the temple when you paste the template to the wall.
2. Drill four holes with respect to the distances as in picture 5.
3. Insert provided nogs into the four holes.
4. Fix the upper and lower brackets as shown in picture. 6.
5. Hang the Flip Heater to the upper bracket and fix it to the lower one until you hear a "click" as indicated in picture. 7.

Portable Use:

1. The Product can be used inside bathroom, BUT IT MUST BE POSITIONED 36 INCHES AWAY FROM THE BATHTUB, SHOWER, WASH BASIN OR OTHER WATER OUTLET.
2. Pull the stand on the back of the Flip Heater as indicated in picture. Pull it out until its locked.

Operation:

The Product is provided with a switch and a thermostat as indicated in picture. 9;

Switch (Flip Heater Use):

- The switch allows you to select different operating modalities: off (O), cold air(Ventilation), warm air (750W) and hot hair (1500W).
- The Product is equipped with a warning light (picture. 10) that turns red in case of overheating or malfunctioning. The warning light will not turn on during normal use.
- Do not lean anything against the Product in order to avoid overheating/malfunctioning, either in mobile position or in wall mounted position.

Thermostat Use:

In a room that is hotter than 86 degrees Fahrenheit it is normal that the thermostat will keep the Product from turning on. Vice versa, in a very cold room 25 degrees Fahrenheitit is regular that the Product will run continuously, even if at its

minimum. In order to adjust the thermostat, we advise you to:

- Place the thermostat on highest temperature and let the Flip Heater reach a toasty temperature;
- Turn the knob in anti-clockwise direction until you hear “a click” and the Flip Heater will turn off;
- Turn the knob just a bit in clockwise direction;
- In this position the thermostat holds the temperature you have chosen.

Filter:

Your Product is equipped with a filter in order to protect the heating element from dust and dirt.

- Before cleaning the appliance, disconnect it from the mains socket and wait for it to cool down.
- The filter is removable to be easily cleaned with water.
- To remove the filter push the tab and pull as indicated in picture. 12;
- We advise you to clean the filter every 6 months *(don not throw the filter away - remember to reassemble it on the Flip Heater after cleaning operation)*.

Safety measure:

For avoiding risks and damages caused by overheating (for example a partial or complete obstruction of air flow), the Product is equipped with a safety device that stops the operation. In this event unplug the appliance from the outlet, wait for 30 minutes, let the Flip Heater cool down and remove the object that obstruct air flow. Now it is possible to turn the Product on as depicted above. If the problem continues, please contact the warranty center.

How to use:

1. Please make sure the switch is positioned at Off (O).
2. Connect the power cord to electric socket.
3. Select the switch to cold air (Ventilation), warm air (750W) or hot hair (1500W).
4. Turn the thermostat to Max, the Flip Heater start running.
5. After use, turn the switch to Off (O), the Flip Heater stopped.

Maintenance:

1. Before cleaning, switch off the heater and unplug from the outlet.
2. Wait until the Product cools down.
3. Use a soft towel to clean the cover. Or use a vacuum cleaner to clean the dust off the surface.
4. Never splash any liquid into the Flip Heater.

Product Specification:

Model: EWS-800H-W

Voltage: 120V

Frequency: ~ 60 Hz

Power: 1500W

Protection level: Mobile: IP21 , Wall Mount: IP24

Size: 282 (L) x 83 (W) x 400 (H) mm

Accessories: Upper / Lower bracket x 1; Nogs x 4 ; Screw x 4 ; Hanging template x 1

Customer Service

IF WARRANTY/CUSTOMER SERVICE IS NEEDED
Contact the manufacturer by calling customer service department at 1-877-891-7333.
EnergyWise Solutions LLC
PO Box 4681
Logan, UT 84323
Make sure you have your warratnty, your sales receipt, location of purchase and the model/serial number of your product.